HTW-300 Темная термотрансферная бумага для струйной печати

- 1. Название продукта: темная бумага для струйной печати
- 2.Код: HTW-300
- 3. Размер: А4 А3 0,42*30 м
- 4. Совместимые принтеры: EPSON Canon HP, малоформатный принтер или воск, ручка, масляный карандаш, флуоресцентный маркер, цветной карандаш и т. д.
- 5. Совместимые чернила: чернила на основе красителей, пигментные чернила
- 6. Режим печати: настройка качества -- изображение, вид: обычная бумага или фотобумага хорошего качества.
- 7. Температура нагрева: 165 градусов
- 8. Время нагрева: 25 секунд
- 9. Горячий/холодный пилинг после термопресса
- 10. Давление: среднее давление
- 11. Ткань: светлая ткань, ткань темного цвета (черный, темно-синий и т. д.), любая ткань, хлопок
- 12. Упаковка: 20 листов/полиэтиленовый пакет или 100 листов/упаковка
- 13.Советы по нагреву: 5 темных бумаг, добавьте одну жиронепроницаемую бумагу, снимите изображение, которое вам нужно нагреть, и положите на ткань, добавьте жиронепроницаемую бумагу и один кусок белого хлопка, изображение будет ярче.



Feature

- Украсьте ткань любимыми фотографиями и цветной графикой.
- Разработан для ярких результатов на темных и светлых хлопчатобумажных или смесовых тканях из хлопка и полиэстера.
- Идеально подходит для персонализации футболок, холщовых сумок, фартуков, подарочных пакетов, ковриков для мыши, фотографий на стеганых одеялах и т. д.
- Гладить с помощью обычного бытового утюга и термопресса.
- Хорошо моется и сохраняет цвет

Specification

reaced refractit teltal

What's your need?

InkJet Transfer paper: (HTW-300)



Computer:



Normal InkJet printers (Normal Inks):



Heat Press/ Iron-On






About Transfer Paper?

With inkjet transfer paper, you can transfer your photos and images with wax crayons, Oil pastels, fluorescent markers, color pencil, Normal dye ink or pigment ink, to T-shirts, sweatshirts, aprons,or just about any cotton, cotton blend, or polyester fabric. For best results, use light colored material with a smooth surface.

1. Printing Instructions

- Print design on the paper with the correct orientation panel. Print the image on the coated side of the transfer paper.Check printer settings; single-sheet feeding is recommended.
- Use normal print settings when preparing for print. No need to oversaturate with ink

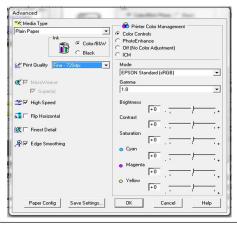

2. Hand Iron Transferring Instructions:



- Iron on a hard surface, Don't steam, Place a pillow case or T-shirt between your hard surface and your garment to allow the heat to penetrate the transfer paper.
- Adjust iron at "Wool/cotton" setting. Briefly iron the fabric to ensure that it is completely smooth.
- Before transferring, leave the printed image to dry for approx.15 minutes, cut out the motif without leaving a margin around the edges, peel off image layer gently from the back paper. Place image layer onto the textile with the printed image facing upwards
- d. Cover a grease proof paper onto the image layer, Iron the grease proof paper applying less pressure, warm up the grease proof paper evenly with slow circling, then enhance pressure movements from edge to edge and make sure thet heat is evenly transferred over the entire area, Don't forget the corners and edges. When moving the iron, less pressure should be given, iron for approx.4 min for 8.5" X 11" size image
- Follow-up ironing the whole the grease proof paper quickly, heating all of the grease proof paper again for approximately 10-13 seconds, then peel off grease proof paper starting at the corner.

Notes: It is possible to use the same grease proof paper for 5 times.

3. Heat Press Transferring Instructions:



.Set the tempture of heat press on 165°C and 25 ~30 5 second to second to transfer. make sure



fabric for about smoothly.



c. After printing, please d. Peel off the wait for a while to make sure to dry of inks, then cut off the edge along image, peel the blank off



image laver



e. Place image layer with image faceing upward on fabric.



f. Lay over a grease proof paper onto image



g. Lay over a cotton fabric onto grease proof paper, then press on 165°C and 25 ~30 second to transfer



h. Peel off the cotton fabric and the grease proof paper. Finished!

4.Before Washing:

Leave finish item for at least 24 hours before wash.wash inside out in cold water. Dry at normal heat settings. Do not use bleach, fabric softener, or harshdetergents. Do not iron directly over transfer.

IMPORTANT! We thoroughly test each of our products on various substrates using different transfer equipment. however, it is impossible for us to duplicate all variables using all substrates and transfer equipment. Therefore, it is essential that you test the paper prior to production using your equipment, methods, and substrate material. Heat presses vary in accuracy. Conduct tests to determine the best time and temperature to use with your equipment. Please keep in mind that the seller's and manufacturer's maximum obligation shall be replace any paper that has proven to be defactive. Neither the seller nor the manufacturer shall be liable for injury, direct or the consequential, arising out of the use of, or inability to use the paper.

Application

Темная (непрозрачная) копировальная бумага для струйной печати идеально подходит для персонализации темных или светлых футболок, фартуков, подарочных пакетов, ковриков для мыши, фотографий на стеганых одеялах и многого другого.



Gallery

